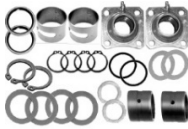






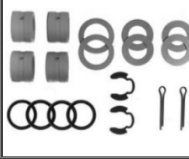
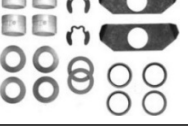
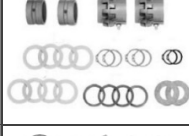
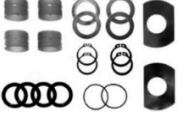
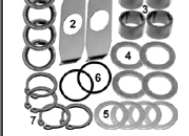






## S-CAM KITS

	<b>H-27101HD</b>	E-3520AHD B-8683HD M-K61 K-270 CQ67386		<b>H-27102</b>	E-2469 B-8655 M-K26 K-345 CQ67382
	<b>H-27103</b>	E-5307 B-8655Z M-K102 K-347 CQ67383		<b>H-27106</b>	M-K20 E-2090 K-88 CQ67324 B-8649
	<b>H-27109</b>	MK-85 E-3989AHD CQ65517 B-8747		<b>H-27112</b>	E-2088AHD B-8681HD
	<b>H-27115</b>	M-K16 E-2382 K-97 B-8645		<b>H-27118</b>	E-2125 B-8648 M-K19 K-357 CQ67326
	<b>H-27119</b>	M-K86 E-5501 CQ65501 B-8746		<b>H-27120</b>	M-K63 E-2696A B-8684 K-360 CQ67354
	<b>H-27122</b>	M-K17 E-2086B K-81 CQ67327 B-8646		<b>H-27123</b>	M-K81 E-3993B K-367 CQ67387 B-8707
	<b>H-27126</b>	M-K88 E-9079HD B-8773MHD K-363 CQ67416		<b>H-27131</b>	E-11897 K-503 MK134 03-1452 S-26348
	<b>H-27132</b>	E-9053 K-312 CQ67412 B-8793		<b>H-27140</b>	E-3876 B-8744 M-K87 K-285 CQ62768